



1501 Industrial Way North, Toms River, NJ 08755
 Phone: (732) 349-2109 • Fax: (732) 244-0867

#100032/ #100033/
 #100042/ #100062

SS/RS Front and Rear Emblem Installation, 2010 Camaro

PACKING LIST

Before installation, use this checklist to make sure all necessary parts have been included.

ITEM	QTY	CHECK	PART NUMBER	DESCRIPTION
1.	2	<input type="checkbox"/>	010034803	SS Badge
	Or 2	<input type="checkbox"/>	Or 010034804	Or RS Badge
2.	1	<input type="checkbox"/>	010034805	SS Badge Backing Plate
	Or 1	<input type="checkbox"/>	Or 010034806	Or RS Badge Backing Plate
3.	1	<input type="checkbox"/>	010378011	Front Grille Insert, SS
	Or 1	<input type="checkbox"/>	Or 010378012	Or Front Grille Insert, RS
4.	1	<input type="checkbox"/>	INST	INSTRUCTIONS

CAUTION:

Installation of badging is not to be attempted until vehicle, parts, and shop area are at least 60-70 degrees Fahrenheit. This will provide the conditions necessary for maximum glue adhesion

WARNING:

Do not use 100% IPA, acetone, denatured alcohol, lacquer thinner or mineral spirits on any painted or unpainted surface. These cleaning liquids either evaporate too quickly or leave a residue that reduces adhesion. SLP recommends using 50:50 isopropyl alcohol and water mixture to clean areas prior to any adhesive application

IMPORTANT:

ALL STATEMENTS, TECHNICAL INFORMATION AND SUGGESTIONS CONTAINED HEREIN ARE BASED ON DATA WE BELIEVE TO BE RELIABLE, BUT THE ACCURACY OR COMPLETENESS THEREOF IS NOT GUARANTEED. NOTHING HEREIN SHALL CONSTITUTE A WARRANTY, EITHER EXPRESSED OR IMPLIED. IT IS THE USERS RESPONSIBILITY TO DETERMINE THE SUITABILITY FOR HIS OWN USE OF THIS PRODUCT.

INSTRUCTIONS –

1. Clean the areas that badges will be sticking to with wax and grease remover or a 50/50 mix of isopropyl alcohol and water.
2. Cut slits into the center of one of the SS badge clear backings as shown in Fig 1 but do not cut through. Start the bottom cut at the same height as the tail end of the 'S' starts. The wider of the gap between the SS is the top.



Figure 1: Slit cut in clear backings

3. Remove the clear backing on the sticky side of the SS badge, so you may stick the badge to the SS Grille Insert. Leave on the clear sheet in front. Before sticking to the SS Grille Insert, you will have to bend the S's slightly inward in order to match the Front Grille Insert's contours. See Figure 2. Press firmly in place once in the desired position and remove front film.

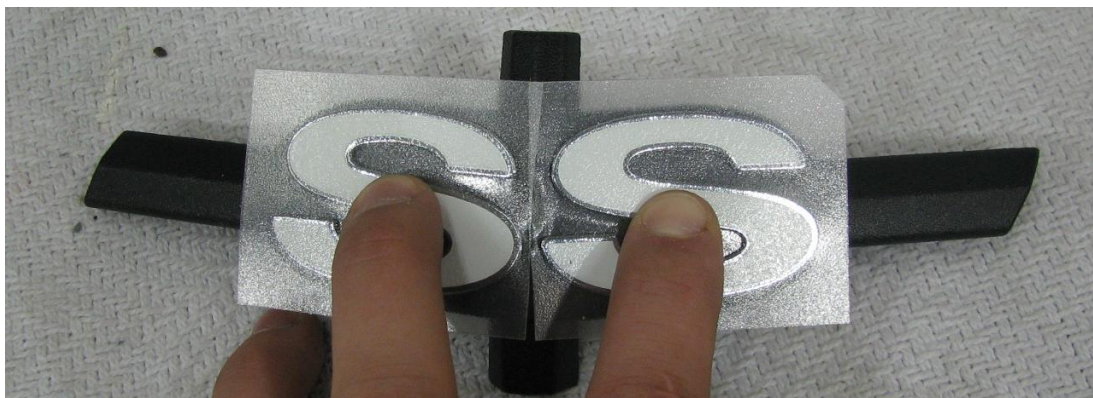


Figure 2: Slight bending of the SS to match the contour of the Grille Insert

4. Remove the factory 'bowtie' emblem by reaching behind the grille, pushing down on the outer two tabs, and twisting the bowtie counter clockwise all at the same time as pulling it outward from the vehicle. If you look at the back of the Front Grille Insert, you will see how the tabs are laid out. It is the same for the bowtie as it is for the Grille Insert. See Figure 3.



Figure 3: Removal of bowtie from vehicle

5. Push the SS Grille insert into the front of the vehicle. It should look like Figure 4 below when installed.

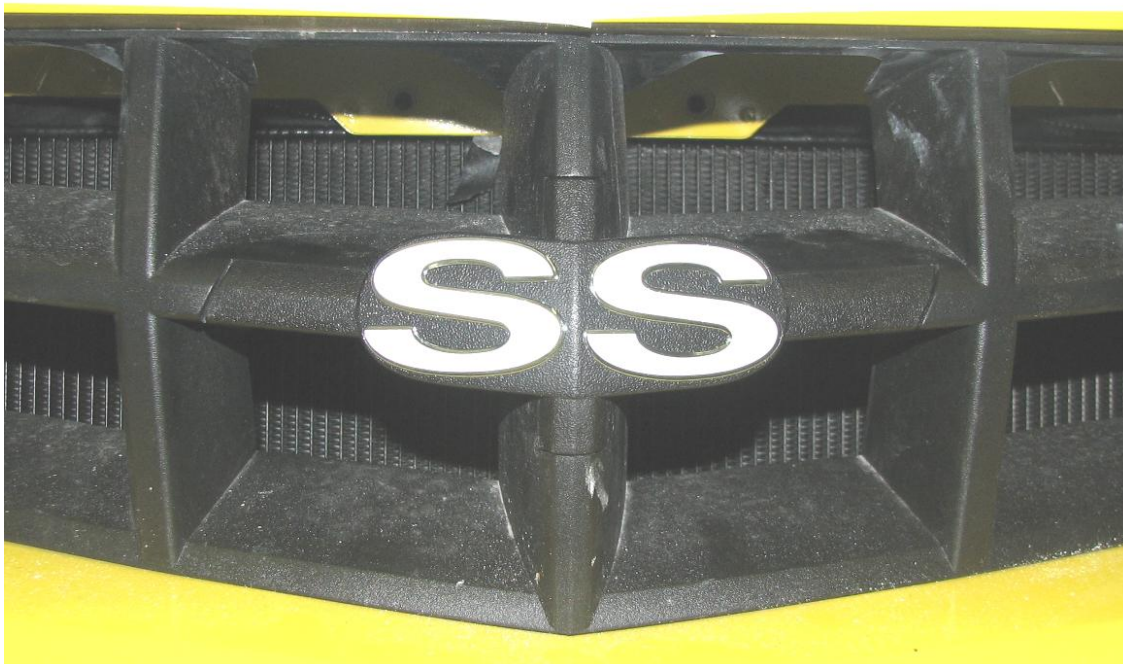


Figure 4: SS Grille Insert installed

6. Center the 2nd SS Badge over the black backing plate, remove the clear backing, and press into place. Be sure the wider gap between the S's is up top. It's easiest to do this before putting it on the vehicle. See Figure 5. Remove the front film.



Figure 5: SS Badge on rear blackout plate

7. Center the SS with the blackout plate over the holes in the rear decklid (be sure the rear blackout panel decal is on first!). Use a washable automotive paint marker if desired to mark your center points. Remove the backing and press into place. The finished result should look like Figure 6.



Figure 6: Finished installation of rear SS badge

NOTE The RS badges and grille insert installs the same way as the SS